


ACTIVE DOOR RAIL HANDLE OPERATION

LOCKING ACTIVE DOOR

- 1) Turn thumbturn to horizontal position.
- 2) Lift handle to activate gear.

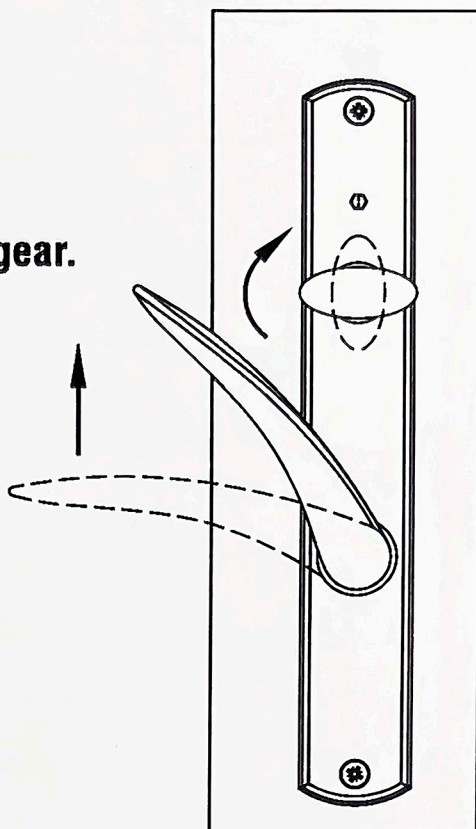

UNLOCKING ACTIVE DOOR

- 1) Push handle down to open.
- 2) Thumbturn rotates back to vertical position automatically.

